

WILLY WORKS




Quick Start Guide

This page walks you through the full casting process at a glance.

Before you start:

Please read the full step guide once. Use this page during the life casting.

- Proper body preparation is required before casting. Please review the preparation section in the full instruction guide before beginning.
- Two people are required to complete this task.
- After approval and payment, wrap the cast securely and return it using the prepaid shipping label (provided in approval email).

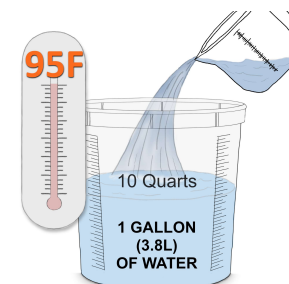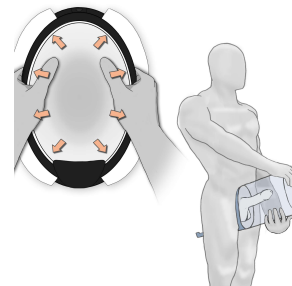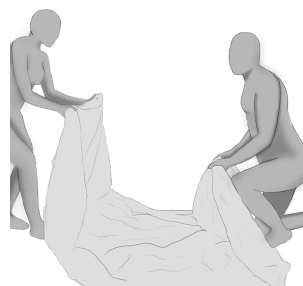

1.) Check / Prepare Workspace

In a private space. Lay out all of the materials. Keep everything within reach. Put down protective floor sheet and work on that area to reduce mess.

2.) Adjust & Practice Position

Press around the silicone liner edges so it sits flush in the insertion cup. Practise positioning the penis and testicles inside the container. **Keep both centred and clear of the walls and lower edge.**

3.) Fill 10 Quart container with 1 Gallon (3.8L) water at 95°F

(Distilled Water recommended)




4.) Prepare Alginate & Mix

Open both (2) alginate packs from **Bag A**. Rapidly whisk the alginate into the water for 1 minute



5.) Apply and Hold

Apply handful of alginate to underside of the penis for improved detail. Then insert penis into molding container.

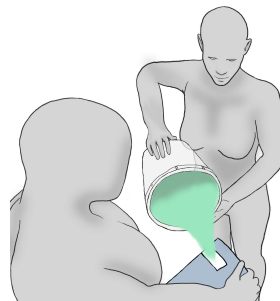


6.) Pour & Wait 2 mins

Hold container firmly against body. Pour alginate into top slot until filled. Stay still and centred for approximately 2 minutes.




7.) Remove & Inspect

Withdraw penis carefully. If impression is clean & centred, continue. If warped or broken, start over with new alginate.

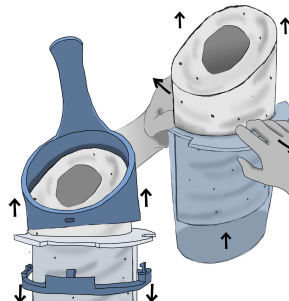


8.) Remove Alginate Mold

Carefully unclip insertion cup and gently slide alginate mold out from the silicone liner.

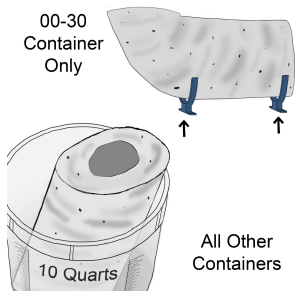


9.) Support Mold

Place the mold upright in the 10-quart bucket. For the **0-30° container**, attach both support brackets instead.

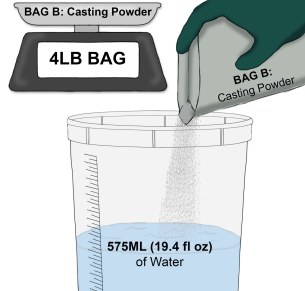


10.) Casting Powder & Water

Open **Bag B** and gradually add and mix the 4 lb bag of casting powder to **575 ml (19.4 fl oz) of cold water** in the **2.5-quart cup**.

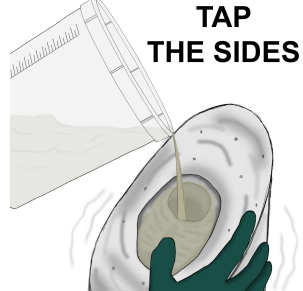


11.) Pour Mixture

Slowly pour into alginate mold. Gently Tap sides to release any trapped air bubbles.

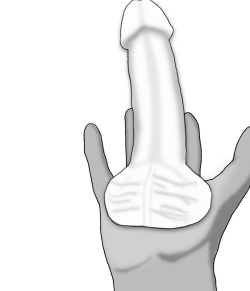

12.) Cure & Remove

Leave undisturbed for 1 hour. Remove cast and dry overnight.

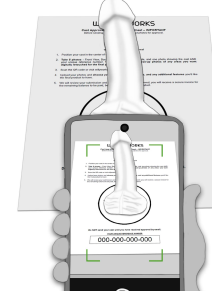

13.) Photograph & Submit

Photograph on approval sheet. Submit photos and await approval before payment and return shipping.