

WILLYWORKS


Quick Start Guide

This page walks you through the full casting process at a glance.


Before you start:

Please read the full step guide once. Use this page during the life casting.

- Proper body preparation is required before casting. Please review the preparation section in the full instruction guide before beginning.
- Two people are required to complete this task.
- Approximately 30 Minutes active working time.
- We'll check your cast before production

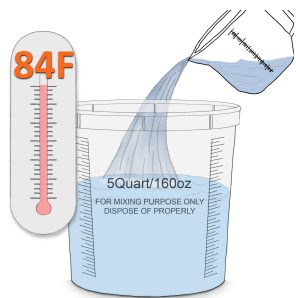


4.) Fill 5 Quart container
with 3300ml water at 84F / 28c
(Distilled Water recommended)

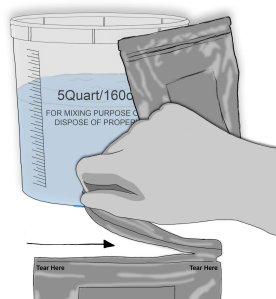


5.) Prepare Alginate
Open both (2) Cavex Clevercast
alginate packs. Have hand whisk
ready. Work steadily – There is
enough time.



6.) Mix (1 Min)
When fully erect, rapidly whisk
the alginate into the water for 1
minute

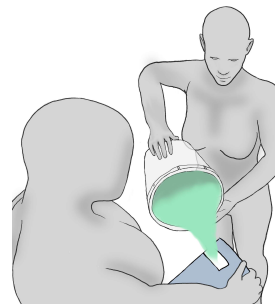


7.) Pour
Insert penis in mold container,
with body creating a seal to stop
leaks. Then immediately pour
alginate into top slot until filled.

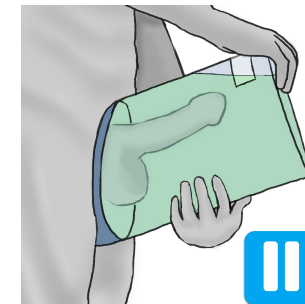


8.) Hold & Wait – Do Not Move
Hold the container against body.
Wait 1.5 minutes until alginate is
solid like soft rubber.



9.) Remove & Inspect
Withdraw penis carefully. If
impression is clean & centred,
continue. If warped or broken,
start over with new alginate.

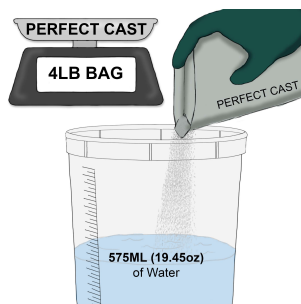


10.) Mix Perfect Cast & Water
Add entire Perfect Cast bag to
575ml water in 64oz mixing cup.
Mix until smooth.

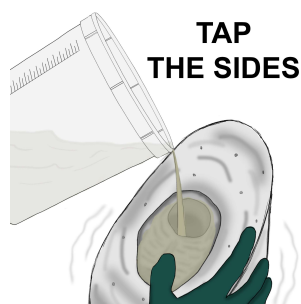

11.) Pour Mixture
Slowly pour into alginate mold.
Gently Tap sides to release any
trapped air bubbles.



12.) Cure & Remove
Leave cast to cure, undisturbed
for 1 hour. After that, carefully
break alginate apart and remove
cast.

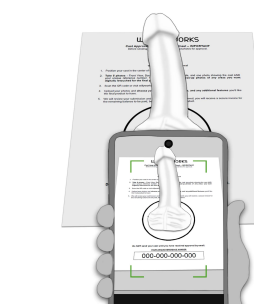

13.) Photograph & Ship
Photograph cast on approval
sheet. Submit photos, await
approval. Complete order and
then Ship using prepaid mailer.

